

# LED PANEL LIGHT

## SQUARE AND RECTANGULAR "B" SERIES

## PRODUCT APPLICATIONS



## Installation diagram


These instructions should be read carefully and retained after installation for further reference and maintenance.

### SAFETY:


1. Please read the specification first, to make sure the service environment matches the condition in the specification before using.
2. Make sure the switch of product is off before connecting to the power supply to prevent electric shock.
3. Operation against rules of product is off before connect to the power supply to your personal safety.
4. Dangerous high voltage, Non-professionals are not allowed to maintain the products.
5. If the exterior flexible cable is damaged, it must exchange by the supplier, agent or other similar qualified personnel.

### WARNING:


1. Ensure the luminaire is switched off & suitably cooled down before carrying out any maintenance work.
2. MIN 90 °C SUPPLY CONDUCTORS
3. SUITABLE FOR OPERATION IN AMBIENT NOT EXCEEDING 40 °C
4. INHERENTLY PROTECTED
5. TYPE IC
6. VAPOR BARRIER MUST BE SUITABLE FOR 90°C (For CUL only)
7. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATIONS CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
8. DRY LOCATIONS ONLY.
9. ACCESS ABOVE CEILING REQUIRED.

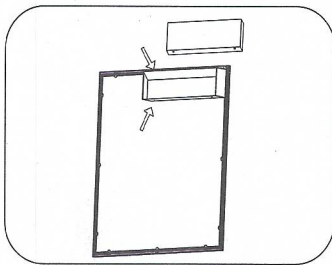


1. Push the both side of the power case, get off the cover.

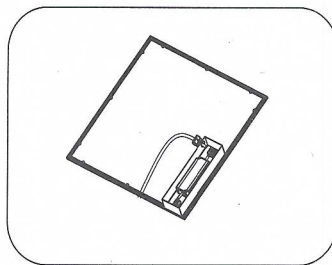

2. Install the flexible metal conduit, and through the electrical wiring.

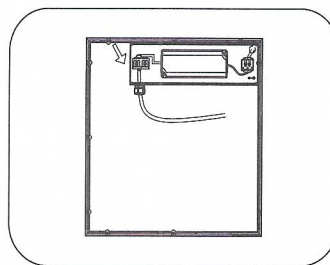


3. Push the connector head, connect the electrical wiring, then install the cover.

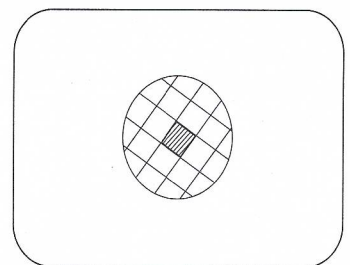

4. Install the panel light to the ceiling.

## Non-dimmable and dimmable UL Panel Light wiring diagram

### Non-dimmable

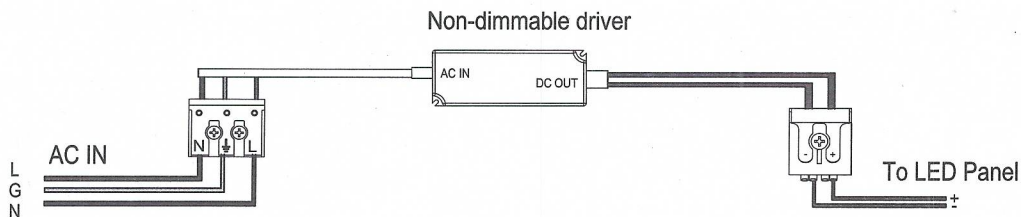

### Dimmable

Dimmable (3 in 1:1-10VDC/PWM/Resistance)

