# **Solar Wall Light Manual**

# **Solar Wall Light Manual**

#### **Product List**

- ①Lamps
- 2 Color box
- ③Accessories
- 4 Manual











## **SWITCH CONTROL MODE**

- Press the switch button once (PIR motion sensor)
- (constant mode)
- Press the switch button twice
  Press the switch button three times (turn off)





#### **CIRCUIT DETECTION STEPS FOR LAMPS NOT WORKING**

#### **Steps**

- 1.Dears receive When lighting Test the light first Guaranteed Lighting can light up normally re-install
- 2.Please be dark at night or use something completely covered Solar panel test light



Paper cover



Dark test light

### **INSTALLATION STEPS**





- ①As shown in Figure 1, fix the bracket with two expansion screws at the position where the lamp needs to be installed
- ②Put the lamp into the bracket, and use a screwdriver to tighten the two screws on the side to quickly complete the installation





- ③ Press the black switch, click first: PIR sensor, click twice: Constant bright, click thrice: Turn offNeed to turn on the switch, it will work automatically when it is dark.
- The effect of installation completion

### **★ PRECAUTIONS**

- Please pay attention to fixing lamps so as not to hurt people when the wind blows.
- In order not to affect the use of lights, clean up the dust and dirt on the surface of the solar panels every 3 months.
- Please check regularly whether the thread has come off or broken.
- Solar powered lamps contain batteries. Batteries are recyclables. Please do not litter.





