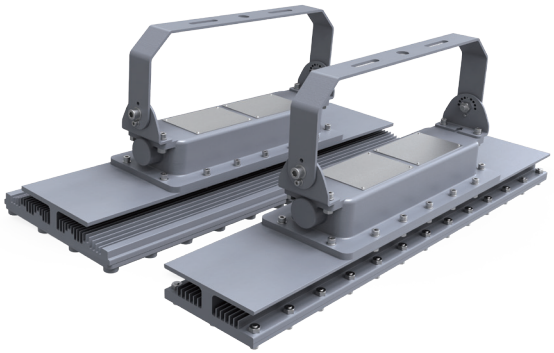


BEFORE YOU BEGIN

Read these instructions completely and carefully.

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.
- Make sure the supply voltage is the same as the rated luminaire voltage.

RISK OF FIRE


- Follow all NEC and local codes.
- Use only UL or IEC approved wire for input/output connections.
- Do not operate in ambient temperature above that indicated on the luminaire nameplate.


Warning:

CUL for Hazloc:


- SUITABLE FOR WET LOCATIONS;
- THIS LUMINAIRE IS ACCEPTABLE FOR OPERATION IN AMBIENT CONDITIONS NOT EXCEEDING 50 °C;
- FOR SUPPLY CONNECTION, USE WIRES RATED FOR AT LEAST 90°C;
- NO SERVICEABLE PARTS" OR "NO USER SERVICEABLE PARTS. DO NOT OPEN FOR CLEANING.;
- CAUTION - "TO REDUCE THE RISK OF IGNITION OF HAZARDOUS ATMOSPHERES, DISCONNECT THE LUMINAIRE FROM THE SUPPLY CIRCUIT BEFORE OPENING. KEEP TIGHTLY CLOSED WHEN IN OPERATION.";
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED;
- "CAUTION – RISK OF SHOCK" and "DISCONNECT POWER BEFORE SERVICING".

■ U-Bracket:

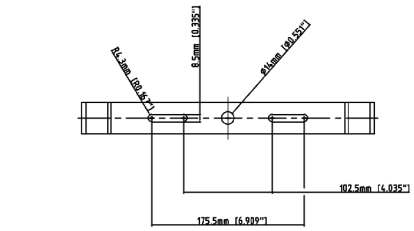

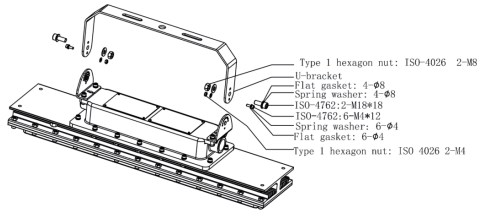

■ Ceiling mount:

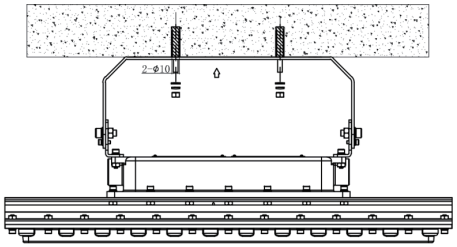

Align the mounting holes of the lighting fixture U-bracket with the holes of the expansion screw.

