




Emergency LED Driver spec: SB-EMLY15W27-XX

Model Number:

Features

- Compact and easy to install.
- · Meet most of safety standards for lighting.
- Built-in lithium battery.
- Battery protections: over charge protection, over discharge protection, short circuit protection.
- Indicator shows a variety working modes.
- Intelligent emergency automatic detection function.
- The batteries meet 500 cycles of standard charge and discharge.
- Constant output power(Auto-sensing output within each range).

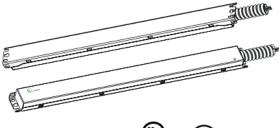






Model List

Input Voltage	Output Voltage	Output Power	Efficiency	Input Current	Charge/Dischage Duration 24H/1.5H
100-347V AC 50/60Hz	30-60V DC	15W	>80%	≤100mA	C:with conduits W: with conduits

Wiring Diagram

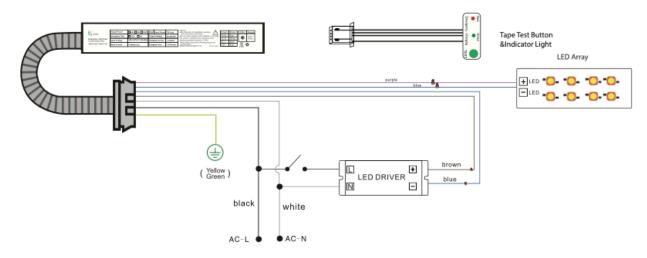


- 1. IN EMERGENCY MODE, DOUBLE-CLICK THE TEST SWITCH TO TURN OFF THE CURRENT EMERGENCY STATE.
- 2.TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.



Dimensions

15W: 17.7"X1.26"X0.83"(450X32X21mm)

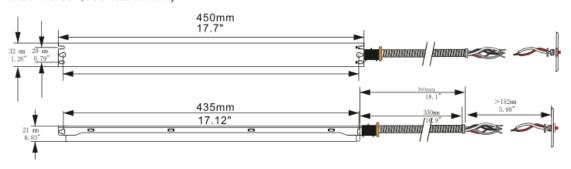







Risk of fire or electric shock. luminaire wiring and electrial parts may be damaged when drilling for installation fo LED emergency backup.check for enclosed wiring and components.

Risk of fire or electeic shock this LED emergency backup installation requiresknowledge of luminaire electical systems.

if not qualified do not arrempt installation.contact a qualified electrician.

Before installing make certain the AC power to the fixture is off.

the electrical rating of this product is 100-347V ac, installer must confirm that there is 100-347V ac to the fixture before installation. to prevert electrical shock only mate unit connector after installation is complete and before the AC power to the fixture is back on. This LED emergency backup unit requires an un-switched AC power source of 100-347Vac ,50/60Hz the AC driver must be on the

- Risk of fire or electric shock. luminaire wiring and electrial parts may be damaged when drilling for installation fo LED emergency backup.check for enclosed wiring and components.
- Risk of fire or electeic shock.this LED emergency backup installation requiresknowledge of luminaire.electical systems. if not qualified do not arrempt installation.contact a qualified electrician.
- Before installing make certain the AC power to the fixture is off.
- The electrical rating of this product is 100-347V ac, installer must confirm that there is 100-347V ac to the fixture before installation.
- to prevert electrical shock only mate unit connector after installation is complete and before the AC power to the fixture is back on.
- This LED emergency backup unit requires an un-switched AC power source of 100-347Vac, 50/60Hz the AC driver must be on the same branch circuit as the LED emergency backup unit.
- Do not mount near gas or electric heaters.
- Do not use outdoors.
- The emergency LED driver is for use with grounded ,UL Listed LED luminaires shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire.
- Verify that all replacement lamp types marked on the installed luminaire are also identified as suitable for use with this emergency
- equipment should be mounted in locations and at heights where it is not be subjected as suitable for use with this emergency battery
- Equipment should be mounted in locations and at heights where it is not be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer and may cause an unsafe condition.
- Do not use this equipment for other than its intended use.
- Use with grounded,UL Listed, dry or lamp location rated fixtures.



Operation

AC power is present, the LED load from the LED driver is normal power supply ,AC LED driver output current can not exceed 150W or 4A, the emergency driver is charging in a standby mode the green LED light flashes indicates that it is charging. the green LED light on indicates that it is full charged.

Emergency operationwhen the AC power goes out, the emergency driver detects the AC power outage and automatically swith to the emergency mode.

Self-Testing


The YT series is UL listed and are equipped with self-testing functionality.

Initial Self-test after installation

It will perform a functional test for 3 seconds after the driver is installed and then perform a second test in 120 minutes to check the wiring and battery output. The indicator will be off or flicker in case of a failure or a an error.

Monthly Self-Test

It will automatically perform a test every 30 seconds for 3 seconds, diagnosing wiring, and battery output, If the indicator LED is blinking or off, signifies there is a failure.

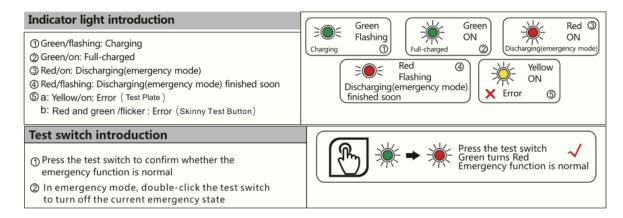



IMPORTANT SAFEGUARDS When using electrical equipment, basic safety precautions should always be followed including the following READ AND FOLLOW ALL SAFETY INSTRUCTIONS.













